

SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the Warranty.
2. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed Warranty.
3. If you have any questions or comments regarding this unit's operation or believe any repair is necessary, please call our Consumer Service Department at 1-800-323-9519 or visit our website at www.crockpot.com.

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited, doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-323-9519 and a convenient service center address will be provided to you.

In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-323-9519 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located at 2381 Executive Center Drive, Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please call our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

To register your product, please visit us online at www.crockpot.com.

©2012 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All Rights Reserved.

Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

Website: www.crockpot.com.

SPR-04231 2-293
Printed in China

155060 Rev 1
Entertaining Food Warmer

CROCK·POT®

• THE ORIGINAL SLOW COOKER •

Entertaining Food Warmer



Owner's Guide

Read and Keep These Instructions

www.crockpot.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or heating base in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Use oven mitts or allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the manufacturer (see warranty) for examination, repair, or adjustment.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter or touch heated surfaces.
9. Do not place on or near a hot gas or electric burner or in a heated oven.
10. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Always use oven mitts when moving your heated Crock-Pot® Food Warmer.
11. Do not use appliance for other than intended use.
12. Avoid sudden temperature changes, such as adding refrigerated foods or cold liquids into a heated pot.
13. To disconnect, press/switch OFF then remove plug from wall outlet.
14. The use of accessory attachments not recommended by the manufacturer may cause injuries.
15. Keep 6 inches clear from the wall and 6 inches clear on all sides.
16. **CAUTION:** To prevent damage or shock hazard, do not cook directly in the heating base. Warm only in the stoneware provided.

SAVE THESE INSTRUCTIONS

This appliance is for **HOUSEHOLD USE ONLY**.

There are no user-serviceable parts inside. Do not attempt to service this product.

A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. AN EXTENSION CORD MAY BE USED WITH CARE; HOWEVER, THE MARKED ELECTRICAL RATING SHOULD BE AT LEAST AS GREAT AS THE ELECTRICAL RATING OF THE SLOW COOKER. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.



POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

IMPORTANT NOTE: Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your food warmer to prevent possible damage to the surface.

NOTE: During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

NOTE: Please use caution when placing your stoneware on a ceramic or smooth glass cook top stove, countertop, table, or other surface. Due to the nature of the stoneware, the rough bottom surface may scratch some surfaces if caution is not used. Always place protective padding under stoneware before setting on table or countertop.

CROCK-POT® FOOD WARMER

Warm and serve 3 separate dishes all in one! This Crock-Pot® Food Warmer features an attractive design with 3 removable crocks (16 ounces each). Perfect for entertaining so you can get out of the kitchen and enjoy the party!

Now you can take the party with you. A portable travel bag is included for easy transport and less mess on-the-go.

CROCK-POT® FOOD WARMER COMPONENTS

Fig. 1



PREPARING YOUR CROCK-POT® FOOD WARMER FOR USE

1. Use caution when lifting the complete food warmer; it is heavy.
2. Ensure the food warmer is placed securely on a table or counter.
3. Before you use your food warmer, remove all packaging components and wash the lids and stoneware with warm soapy water and dry thoroughly.

HOW TO USE YOUR PORTABLE TRAVEL BAG

1. Ensure the unit is unplugged.
2. Place individual lids on stoneware.
3. Carefully lift the food warmer by the base and fit inside of the bottom of the Travel Bag.
CAUTION: If the unit has been on, use oven mitts to place the food warmer inside the bag as the outer surfaces will be hot.
4. Zip up the bag to ensure the lids are held in place while traveling and always carry by the side handles on the bag.



HOW TO USE YOUR CROCK-POT® FOOD WARMER

1. Place the stoneware into the heating base, add your ingredients to the stoneware, and cover with the lids. One, two or all three sections can be used at any given time.
2. Plug in your food warmer and turn the control to the ON setting.
NOTE: ON is ONLY for keeping already cooked food warm. DO NOT place raw or under-cooked meat in the stoneware. We do not recommend using the ON setting for more than 4 hours.
3. NEVER reheat cold food on the ON setting.
4. When you are finished using the unit, unplug and allow to cool before cleaning.

Part	Dishwasher Safe	Oven Safe	Microwave Safe	Stovetop Safe
Lids	Yes	No	No	No
Stoneware	Yes	Yes, but not in the broiler	Yes	No

Please refer to your Microwave appliance manual for safe use.

USAGE NOTES:

- To speed up the warm time, pre-heat your food using the microwave oven, oven, or stove-top before transferring to your Food Warmer.
- If you suspect that the power has gone out, the food inside may be unsafe to eat. If you are unaware of how long the power was out, we suggest you discard the food inside.
- Do not warm food directly in the heating base. Always place food inside the stoneware.

- Do not overfill stoneware. To prevent spillover, do not fill stoneware higher than $\frac{3}{4}$ full.
- Always wear oven mitts when handling the lids or stoneware, even if the one being moved is not powered on.
- Unplug when warming is done and before cleaning.
- Removable stoneware is ovenproof and microwave safe. Do not use removable stoneware on gas or electric burner or under broiler.

HOW TO CLEAN YOUR FOOD WARMER

- ALWAYS turn your unit off, unplug it from the electrical outlet, and allow it to cool before cleaning.
- The lids and stoneware can be washed in the dishwasher or with hot, soapy water. Do not use abrasive cleaning compounds or scouring pads. A cloth, sponge, or rubber spatula will usually remove residue. To remove water spots and other stains, use a non-abrasive cleaner or vinegar.
- As with any fine ceramic, the stoneware and lids will not withstand sudden temperature changes. Do not wash the stoneware or lids with cold water when they are hot.
- The outside of the heating base may be cleaned with a soft cloth and warm, soapy water. Wipe dry. Do not use abrasive cleaners.
CAUTION: Never immerse the heating base in water or other liquid.
- No other servicing should be performed.

RECIPES

Creamy Spinach Dip

- | | |
|--|---------------------------------|
| 1 8-ounce package cream cheese, cubed | ¼ cup of whipping cream |
| 2 tablespoons grated Parmesan cheese | 2 tablespoons diced pimento |
| 2 teaspoons of finely chopped onion | 1 teaspoon Worcestershire sauce |
| ½ teaspoon thyme | ¼ teaspoon garlic salt |
| ½ of a 10-ounce box frozen chopped spinach, thawed and drained | |

1. Combine cream cheese and whipping cream in greased Food Warmer. Cover and heat until cheese is melted, 30 to 60 minutes.
2. Add remaining ingredients. Cover and heat for 30 minutes.
3. Serve with raw vegetables, crackers or bread pieces.

Hearty Beef Dip

- | | |
|--|------------------------|
| 1 8-ounce package cream cheese, cubed | ¼ cup of milk |
| ½ of a 2½ ounce package sliced dried beef, diced | ¼ cup chopped pecans |
| 2 tablespoons chopped green onion | 1 clove garlic, minced |

1. Combine the above ingredients, in order as they are listed above, in greased Food Warmer.
2. Cover and heat until cheese is melted, 30 to 60 minutes.
3. Serve with raw vegetables, crackers or bread pieces.

Fiesta Dip

- | | |
|--------------------------------------|--|
| ½ of a 16-ounce can of refried beans | ½ cup (2 ounces) shredded Cheddar cheese |
| ¼ cup Mexican salsa | ⅓ green chili pepper, chopped (optional) |

1. Combine all ingredients and place in the Food Warmer.
2. Cover and heat 30 to 60 minutes or until cheese is melted.
3. Serve with tortilla chips or corn chips.

RECIPES

Hot Artichoke Dip

- | | |
|---|----------------------------|
| 1 6-ounce jar marinated artichoke hearts, drained and chopped | ⅓ cup sour cream |
| ½ cup grated Parmesan cheese | ⅓ cup mayonnaise |
| | 1 tablespoon diced pimento |

1. Combine all ingredients in the Food Warmer. Cover and heat 30 to 60 minutes or until hot.
2. Serve with tortilla chips.

DESSERTS

Peanut Butter Fudge Cake (Serves 4-6)

1 cup flour	1 teaspoon vanilla
1½ cups sugar	½ cup peanut butter
1½ teaspoon baking powder	1 cup sugar
2/3 cup milk	¼ cup cocoa powder
2 teaspoon vegetable oil	1 cup boiling water

1. Combine flour, ½ cup sugar and baking powder. Add milk, oil, vanilla and peanut butter. Spoon batter into Food Warmer.
2. Combine 1 cup sugar and cocoa powder, and stir in water. Pour into Food Warmer, but do not stir.
3. Cover and warm for 2-3 hours.

Apple Cranberry Crisp (Serves 4-6)

5 apples, peeled, cored and sliced	Pinch salt
½ cup cranberries	Pinch cinnamon
¼ cup brown sugar	¼ cup butter, softened
1/3 cup oats	1 cup sugar

1. Combine all ingredients in Food Warmer.
2. Cover and warm for 2-3 hours.

Chocolate Fondue (Serves 4-6)

2 12 ounce packages semisweet chocolate chips
1 cup half and half
Strawberries, pretzels, or cookies for dipping

1. Add ingredients to Food Warmer.
2. Cover and warm for 1 hour, or until chocolate is melted. Turn to ON and dip your choice of strawberries, pretzels or cookies.

DESSERTS

Chocolate Dessert Fondue

1 teaspoon butter or margarine	6 1-ounce chocolate candy bars with almonds, broken
1 cup miniature marshmallows	2 tablespoons milk
½ cup whipping cream	

1. Rub stoneware with butter. Place candy bars, marshmallows and milk in the Food Warmer. Cover and heat, stirring every 15 minutes until melted and smooth.
2. Gradually add whipping cream. Cover and continue warming for 30 minutes.
3. Serve with bite-sized pieces of pound cake, marshmallows or fruit.

NOTES